



# Tech Tip

## April 2024

## Setting Link Zoning Priority

Link zoning allows you to set a level of importance for each zone. The default setting is medium, but each zone can be moved between low, medium, and high.

### High Priority:

- Comfort is most important
  - *Nursery*
- Last zone to receive excess air
- Can change system mode

### Medium Priority:

- Link will deliver excess air to zone but prefers to use Low priority
  - *Bedrooms*
- Can change system mode

### Low Priority:

- First zone to receive excess air
  - *Main living areas*
- Cannot change system mode without a Medium or High asking for a mode change

[Learning Management System - FTT: Link Zoning \(Part 1\) \(tranetechnologies.com\)](#)

[Learning Management System - FTT: Link Zoning \(Part 2\) \(tranetechnologies.com\)](#)



## Zone Priority

At least one zone must be set to medium or high.

Low

Medium

High



**Field Service Representative Contact**

**1-884-358-7263**

**1-833-267-8376**